OMA LwM2M v1.0 - Test Results - Virtual SVE-40, 15-21 Nov 2023

Client v1.0 Teams: IoTerop, Aetheros

Server v1.0 Teams: Aetheros, IoTerop and two (2) Servers

Pass Fail Inconclusive Nath Pass Fail Inconclusive Nath Pass Pass	Server v1.0 Teams: Aetheros, lo Terop and two (2) Servers						
LightweightM2M-1.0-int-0 - Client Initiated Bootstrap	OMA-ETS-LightweightM2M-V1 0 2-20180815-A.zip	Pass	Fail	Inconclusive		Out of Time	Totals
LightweightM2M-1.0-in-1.2 - Client Initiated Bootstrap Full (Cert) 1 1 0 4 0 6 CliphtweightM2M-1.0-in-1.2 - Client Initiated Bootstrap Full (Cert) 1 1 0 4 0 6 CliphtweightM2M-1.0-in-1.2 - Simple Bootstrap from Smartcard 0 0 0 0 6 0 6 CliphtweightM2M-1.0-in-	Bootstrap Interface: [0-99]						
LightweightM2M-1.0-in-1.2 - Client Initiated Bootstrap Full (Cert)	LightweightM2M-1.0-int-0 – Client Initiated Bootstrap	3	0	0	3	0	6
LightweightM2M-1.0-int-3 - Simple Bootstrap from Smartcard	LightweightM2M-1.0-int-1 – Client Initiated Bootstrap Full (PSK)	3	0	0	3	0	6
Registration Interface 100-199	LightweightM2M-1.0-int-2 – Client Initiated Bootstrap Full (Cert)	1	1	0	4	0	6
LightweightM2M-1.0-int-101 - Initial Registration 6	LightweightM2M-1.0-int-3 – Simple Bootstrap from Smartcard	0	0	0	6	0	6
LightweightMZM-1.0-int-102 - Registration Update 6 0 0 0 0 6 6 6 6 6	Registration Interface [100-199]						
LightweightM2M-1.0-int-103 - Deregistration 3	LightweightM2M-1.0-int-101 – Initial Registration	6	0	0	0	0	6
LightweightMZM-1.0-in-1.04	LightweightM2M-1.0-int-102 – Registration Update	6	0	0	0	0	6
LightweightMZM-1.0-in-1.04	LightweightM2M-1.0-int-103 – Deregistration	3	0	0	3	0	6
LightweightMZM-1.0-int-201 - Querying basic information in Plain Text format 6 0 0 0 6 LightweightMZM-1.0-int-203 - Querying basic information in TLV format 1 0 0 5 0 6 LightweightMZM-1.0-int-204 - Querying basic information in JSON format 1 0 0 5 0 6 LightweightMZM-1.0-int-205 - Setting basic information in TLV format 5 1 0 0 0 0 6 LightweightMZM-1.0-int-215 - Setting basic information in JSON format 1 0 0 5 0 6 LightweightMZM-1.0-int-220 - Setting basic information in JSON format 1 0 0 5 0 6 LightweightMZM-1.0-int-230 - Setting basic information in JSON format 1 0 0 0 0 6 LightweightMZM-1.0-int-260 - Discover Command 2 0 0 4 0 6 LightweightMZM-1.0-int-260 - Discover Command 2 0 0 3 0 5 LightweightMZM-1.0-int-302 - Cancel Observations using Reset Operation		6	0	0	0	0	6
LightweightMZM-1.0-int-203 — Querying basic information in TLV format	Device management & Service Enablement Interface [200-299]						
LightweightM2M-1.0-int-204 - Querying basic information in JSON format	LightweightM2M-1.0-int-201 – Querying basic information in Plain Text format	6	0	0	0	0	6
LightweightM2M-1.0-int-205 - Setting basic information in Plain Text format	LightweightM2M-1.0-int-203 – Querying basic information in TLV format	6	0	0	0	0	6
LightweightM2M-1.0-int-205 - Setting basic information in Plain Text format	LightweightM2M-1.0-int-204 – Querying basic information in JSON format	1	0	0	5	0	6
LightweightM2M-1.0-int-220 – Setting basic information in JSON format 1 0 0 5 0 6 LightweightM2M-1.0-int-241 – Executable Resource: Rebooting the device 6 0 0 0 4 0 6 LightweightM2M-1.0-int-260 – Discover Command 2 0 0 4 0 6 LightweightM2M-1.0-int-301 – Observation and Notification of parameter values 4 0 0 1 0 5 LightweightM2M-1.0-int-302 – Cancel Observations using Reset Operation 2 0 0 3 0 5 LightweightM2M-1.0-int-303 – Cancel Observations using Observe with Cancel parameter 4 0 0 1 0 5 Security [400-499] LightweightM2M-1.0-int-401 – UDP Channel Security – Pre-shared Key Mode 5 1 0 0 6 6 LightweightM2M-1.0-int-402 – UDP Channel Security – Certified Mode 1 1 0 4 0 6 LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) 1 0 0 <		6	0	0	0	0	6
LightweightM2M-1.0-int-220 – Setting basic information in JSON format 1 0 0 5 0 6 LightweightM2M-1.0-int-241 – Executable Resource: Rebooting the device 6 0 0 0 4 0 6 LightweightM2M-1.0-int-260 – Discover Command 2 0 0 4 0 6 LightweightM2M-1.0-int-301 – Observation and Notification of parameter values 4 0 0 1 0 5 LightweightM2M-1.0-int-302 – Cancel Observations using Reset Operation 2 0 0 3 0 5 LightweightM2M-1.0-int-303 – Cancel Observations using Observe with Cancel parameter 4 0 0 1 0 5 Security [400-499] LightweightM2M-1.0-int-401 – UDP Channel Security – Pre-shared Key Mode 5 1 0 0 6 6 LightweightM2M-1.0-int-402 – UDP Channel Security – Certified Mode 1 1 0 4 0 6 LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) 1 0 0 <	LightweightM2M-1.0-int-215 – Setting basic information in TLV format	5	1	0	0	0	6
LightweightM2M-1.0-int-241 – Executable Resource: Rebooting the device 6 0 0 0 0 6 LightweightM2M-1.0-int-260 – Discover Command 2 0 0 4 0 6 Information Reporting Interface [300-399] LightweightM2M-1.0-in-301 – Observation and Notification of parameter values 4 0 0 1 0 5 LightweightM2M-1.0-int-302 – Cancel Observations using Reset Operation 2 0 0 3 0 5 LightweightM2M-1.0-int-303 – Cancel Observations using Observe with Cancel parameter 4 0 0 1 0 5 Security [400-499] LightweightM2M-1.0-int-401 – UDP Channel Security – Pre-shared Key Mode 5 1 0 0 6 LightweightM2M-1.0-int-402 – UDP Channel Security – Certified Mode 1 1 0 4 0 6 LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) 1 1 0 4 0 6 LightweightM2M-1.0-int-635 – Check Access to the Resources 6 0 0 0 6 LightweightM2M-1.0-int-652 – Ceate Object Instance		1	0	0	5	0	6
LightweightM2M-1.0-int-260 - Discover Command 2 0 0 4 0 6		6	0	0	0	0	6
Information Reporting Interface [300-399] LightweightM2M-1.0-int-301 - Observation and Notification of parameter values 4		2	0	0	4	0	6
LightweightM2M-1.0-int-301 — Observation and Notification of parameter values LightweightM2M-1.0-int-302 — Cancel Observations using Reset Operation LightweightM2M-1.0-int-303 — Cancel Observations using Observe with Cancel parameter LightweightM2M-1.0-int-303 — Cancel Observations using Observe with Cancel parameter Security [400-499] LightweightM2M-1.0-int-401 — UDP Channel Security — Pre-shared Key Mode LightweightM2M-1.0-int-402 — UDP Channel Security — Certified Mode LightweightM2M-1.0-int-403 — UDP Channel Security — Certified Mode (Server Identify Verification Failure) LightweightM2M-1.0-int-403 — UDP Channel Security — Certified Mode (Server Identify Verification Failure) LightweightM2M-1.0-int-651 — Check Access to the Resources LightweightM2M-1.0-int-652 — Querying the firmware version from the client LightweightM2M-1.0-int-680 — Create Object Instance LightweightM2M-1.0-int-685 — Delete Object Instance LightweightM2M-1.0-int-685 — Delete Object Instance LightweightM2M-1.0-int-685 — Delete Object Instance LightweightM2M-1.0-int-701 — Querying the readable resources of object LightweightM2M-1.0-int-701 — Basic Observation and notification on Connectivity Monitoring Object Resource LightweightM2M-1.0-int-751 — Querying the readable resources Soundary Object Resource LightweightM2M-1.0-int-755 — Setting the writable Resource Package 4 0 0 0 1 0 0 6 6 6 6 0 0 0 0 0 0 6 6 6 6							
LightweightM2M-1.0-int-303 - Cancel Observations using Observe with Cancel parameter		4	0	0	1	0	5
LightweightM2M-1.0-int-303 - Cancel Observations using Observe with Cancel parameter	LightweightM2M-1.0-int-302 – Cancel Observations using Reset Operation	2	0	0	3	0	5
Security [400-499]		4	0	0	1	0	5
LightweightM2M-1.0-int-402 – UDP Channel Security – Certified Mode 1 1 0 4 0 6 LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) 1 1 0 4 0 6 LightweightM2M-1.0-int-651 – Check Access to the Resources 6 0 0 0 0 6 LightweightM2M-1.0-int-652 – Querying the firmware version from the client 6 0 0 0 0 6 LightweightM2M-1.0-int-680 – Create Object Instance 5 0 0 1 0 6 LightweightM2M-1.0-int-685 – Delete Object Instance 5 0 0 1 0 6 LightweightM2M-1.0-int-701 – Querying the readable resources of object 5 0 1 0 6 LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 5 0 1 0 6 Firmware Update Object (ID 5) [750-799] 1 0 0 6 LightweightM2M-1.0-int-755 – Setting the writable Resource Package 2 0 0 4 0 6							
LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure) LightweightM2M-1.0-int-651 – Check Access to the Resources LightweightM2M-1.0-int-652 – Querying the firmware version from the client LightweightM2M-1.0-int-652 – Querying the firmware version from the client LightweightM2M-1.0-int-680 – Create Object Instance LightweightM2M-1.0-int-685 – Delete Object Instance LightweightM2M-1.0-int-685 – Delete Object Instance LightweightM2M-1.0-int-685 – Delete Object Instance LightweightM2M-1.0-int-701 – Querying the readable resources of object LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 – Querying the readable resources 5 0 0 1 0 6 LightweightM2M-1.0-int-755 – Setting the writable Resource Package	LightweightM2M-1.0-int-401 – UDP Channel Security – Pre-shared Key Mode	5	1	0	0	0	6
LwM2M Device Object (ID 3) [650-699] LightweightM2M-1.0-int-651 - Check Access to the Resources 6 0 0 0 0 6 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 6 0 0 0 0 6 LightweightM2M-1.0-int-680 - Create Object Instance 5 0 0 1 0 6 LightweightM2M-1.0-int-685 - Delete Object Instance 5 0 0 1 0 6 LwM2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 1 0 0 6 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resource 5 0 1 0 0 6 Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 - Querying the readable resources 5 0 0 1 0 6 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 0 0 4 0 6	LightweightM2M-1.0-int-402 – UDP Channel Security – Certified Mode	1	1	0	4	0	6
LwM2M Device Object (ID 3) [650-699] LightweightM2M-1.0-int-651 – Check Access to the Resources 6 0 0 0 0 6 LightweightM2M-1.0-int-652 – Querying the firmware version from the client 6 0 0 0 0 6 LightweightM2M-1.0-int-680 – Create Object Instance 5 0 0 1 0 6 LightweightM2M-1.0-int-685 – Delete Object Instance 5 0 0 1 0 6 LwM2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 – Querying the readable resources of object 5 0 1 0 0 6 LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 5 0 1 0 0 6 Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 – Querying the readable resources 5 0 0 1 0 6 LightweightM2M-1.0-int-755 – Setting the writable Resource Package 2 0 0 4 0 6	LightweightM2M-1.0-int-403 – UDP Channel Security – Certified Mode (Server Identify Verification Failure)	1	1	0	4	0	6
LightweightM2M-1.0-int-651 - Check Access to the Resources 6 0 0 0 0 6 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 6 0 0 0 0 6 LightweightM2M-1.0-int-680 - Create Object Instance 5 0 0 1 0 6 LightweightM2M-1.0-int-685 - Delete Object Instance 5 0 0 1 0 6 LightW2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 1 0 0 6 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resource 5 0 1 0 0 6 Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 - Querying the readable resources 5 0 0 1 0 6 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 0 0 4 0 6							
LightweightM2M-1.0-int-680 - Create Object Instance 5 0 0 1 0 6 LightweightM2M-1.0-int-685 - Delete Object Instance 5 0 0 1 0 6 LwM2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 1 0 0 6 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resource 5 0 1 0 0 6 Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 - Querying the readable resources 5 0 0 1 0 6 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 0 0 4 0 6		6	0	0	0	0	6
LightweightM2M-1.0-int-680 - Create Object Instance 5 0 0 1 0 6 LightweightM2M-1.0-int-685 - Delete Object Instance 5 0 0 1 0 6 LwM2M Connectivity Monitoring (ID:4) [700-749]. LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 1 0 0 6 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resource 5 0 1 0 0 6 Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 - Querying the readable resources 5 0 0 1 0 6 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 0 0 4 0 6	LightweightM2M-1.0-int-652 – Querying the firmware version from the client	6	0	0	0	0	6
LightweightM2M-1.0-int-701 – Querying the readable resources of object LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 – Querying the readable resources 5 0 1 0 0 6 LightweightM2M-1.0-int-755 – Setting the writable Resource Package 5 0 0 1 0 6 6 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		5	0	0	1	0	6
LightweightM2M-1.0-int-701 — Querying the readable resources of object LightweightM2M-1.0-int-710 — Basic Observation and notification on Connectivity Monitoring Object Resource Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 — Querying the readable resources 5 0 1 0 0 6 LightweightM2M-1.0-int-755 — Setting the writable Resource Package 5 0 0 1 0 6 6 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		5	0	0	1	0	6
LightweightM2M-1.0-int-701 — Querying the readable resources of object LightweightM2M-1.0-int-710 — Basic Observation and notification on Connectivity Monitoring Object Resource Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 — Querying the readable resources 5 0 1 0 0 6 LightweightM2M-1.0-int-755 — Setting the writable Resource Package 5 0 0 1 0 6 6 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0							
LightweightM2M-1.0-int-710 – Basic Observation and notification on Connectivity Monitoring Object Resource 5 0 1 0 0 6 Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 – Querying the readable resources 5 0 0 1 0 6 LightweightM2M-1.0-int-755 – Setting the writable Resource Package 2 0 0 4 0 6	, , , , , , , , , , , , , , , , , , , ,	5	0	1	0	0	6
Firmware Update Object (ID 5) [750-799] LightweightM2M-1.0-int-751 – Querying the readable resources 5 0 0 1 0 6 LightweightM2M-1.0-int-755 – Setting the writable Resource Package 2 0 4 0 6		5	0	1	0	0	6
LightweightM2M-1.0-int-751 – Querying the readable resources500106LightweightM2M-1.0-int-755 – Setting the writable Resource Package20406							
LightweightM2M-1.0-int-755 – Setting the writable Resource Package 2 0 0 4 0 6		5	0	0	1	0	6
		2	0	0	4	0	6
	LightweightM2M-1.0-int-756 – Setting the writable Resource Package URI	2	0	0	4	0	6

LightweightM2M-1.0-int-760 –Basic Observation and notification on Firmware Update Object Resources	4	0	0	2	0	6
LightweightM2M-1.0-int-770 – Successful Firmware update (via COAP)	2	0	0	4	0	6
LightweightM2M-1.0-int-771 – Successful Firmware update (via alternative mechanism)	1	0	0	4	1	6
LightweightM2M-1.0-int-772 – Error Case 1: firmware installation without downloaded package	1	0	0	4	1	6
LightweightM2M-1.0-int-773 – Error Case 2: shortage of storage memory	0	0	0	5	1	6
LightweightM2M-1.0-int-774 – Error Case 3: out of memory	0	0	0	5	1	6
LightweightM2M-1.0-int-775 – Error Case 4: Connection lost during download (package URI)	0	0	0	5	1	6
LightweightM2M-1.0-int-776 – Error Case 5: Package Integrity check failure	0	0	0	5	1	6
LightweightM2M-1.0-int-777 – Error Case 6: unsupported package type	0	0	0	5	1	6
LightweightM2M-1.0-int-778 – Error Case 7: invalid URI (package URI)	0	0	0	5	1	6
LightweightM2M-1.0-int-779 – Error Case 8: Unsuccessful Firmware Update	0	0	0	5	1	6
LwM2M Location Object (ID:6) [800-849]						
LightweightM2M-1.0-int-801 – Querying the readable resources of object	6	0	0	0	0	6
LightweightM2M-1.0-int-810 – Basic Observation and notification on Location Object Instance	6	0	0	0	0	6
Connectivity Statistics (ID 7) [900-949]						
LightweightM2M-1.0-int-901 – Querying a Data Collection from Connectivity Object Instance	6	0	0	0	0	6
LightweightM2M-1.0-int-905 – Setting the writable resources	6	0	0	0	0	6
LightweightM2M-1.0-int-910 – Basic Observation and notification on Connectivity Monitoring Object Instance	6	0	0	0	0	6
MULTI-SERVERS CONTEXT [950-999]						
LightweightM2M- 1.0 - int-950 - Multi-Servers Registration	1	0	0	3	2	6
LightweightM2M- 1.0 - int-951 - Multi-Servers & Attributes	1	0	0	3	2	6
Cellular Network Connectivity ID:10 [1200-1249]						
LightweightM2M-1.0-int-1200 – Querying the readable resources of Object ID:10	3	0	0	3	0	6
LightweightM2M-1.0-int-1201 – Querying the readable resources of Object ID:10 in version 1.1	3	0	0	3	0	6
LightweightM2M-1.0-int-1202 – Setting the Power Saving Mode Resources of Object ID:10 (version 1.1 only)	2	0	0	4	0	6
LightweightM2M-1.0-int-1203 – Observation and notification on Object ID:0 related to Power Saving Mode Re	2	0	0	4	0	6
LightweightM2M-1.0-int-1204 – Observation and notification on Object ID: 10 related to timers	3	0	0	3	0	6
APN connection profile ID:11 [1250-1299]						
LightweightM2M-CONMGMT - 1.0-int - 1250 - APN Configuration	2	0	0	4	0	6
Bearer Selection ID:13 [1350-1399]						
LightwightM2M-CONMGMT - 1.0-int-1350 - Bearer Selection	2	0	0	4	0	6
Portfolio Object (ID 16) [1600-1699]						
LightweightM2M-1.0-int-1630 – Create Portfolio Object Instance	2	1	0	3	0	6
LightweightM2M-1.0-int-1635 – Delete Portfolio Object Instance	2	1	0	3	0	6
BinaryAppDataContainer Object (ID 19) [1900-1999]						
LightweightM2M-1.0-int-1900 – Observation and notification on Object ID 19	0	0	0	6	0	6
LightweightM2M-1.0-int-1901 – Setting the writable Resource Data	0	0	0	6	0	6
Event Log Object (ID 20) [2000-2099]						
LightweightM2M-1.0-int-2000 – Control the Log Function	0	0	0	6	0	6
	0	0	0	6	0	
LightweightM2M-1.0-int-2001 – Querying the readable resources	U	U	U	6	0	6

Problems Identified

APN test: unable to retrieve resource 10/0/11 with content format specified Bearer Test: not object 12/bad request to create and delete instance portfolio

- object didnt provide with resource 13 14

Not testing full firmware upgrade today.

smnc issue - device reports as string for complete representation of smnc space

incompatible dtls cipher suites

215: device POST tlv parse issue

Explanation of Test Cases Results

PASS: Both teams agree that they Pass – Criteria has been met

FAIL: Both teams agree that they Fail – Criteria has not been met

INCONCLUSIVE: Teams are not in agreement of the Test result

NOT APPLICABLE: Test cannot be performed due to lack of support by either of the implementations

OUT OF TIME: There was not enough time to test the Test Case